



European Component Oriented Architecture (ECOIA®) Collaboration Programme: Architecture Specification Part 8: C Language Binding

BAE Ref No: IAWG-ECOIA-TR-004
Dassault Ref No: DGT 144477-E

Issue: 5

Prepared by
BAE Systems (Operations) Limited and Dassault Aviation

This specification is developed by BAE SYSTEMS, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés . AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE SYSTEMS, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés . AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

Note: *This specification represents the output of a research programme and contains mature high-level concepts, though low-level mechanisms and interfaces remain under development and are subject to change. This version of documentation is recommended as appropriate for limited lab-based evaluation only. Product development should rely on the DefStan or BNAE publications of the ECOIA standard.*

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

Contents

0	Introduction	vi
1	Scope	1
2	Warning	1
3	Normative References	1
4	Definitions	2
5	Abbreviations	2
6	Module to Language Mapping	3
6.1	Module Interface Template	5
6.2	Container Interface Template	7
6.3	Container Types Template	11
6.4	User Module Context Template	12
6.5	Guards	12
7	Parameters	14
8	Module Context	15
8.1	User Module Context	16
9	Types	18
9.1	Filenames and Namespace	18
9.2	Basic Types	18
9.3	Derived Types	19
9.3.1	Simple Types	19
9.3.2	Constants	20
9.3.3	Enumerations	20
9.3.4	Records	20
9.3.5	Variant Records	21
9.3.6	Fixed Arrays	22
9.3.7	Variable Arrays	22
9.4	Predefined Types	22
9.4.1	ECOA:return_status	22
9.4.2	ECOA:hr_time	23
9.4.3	ECOA:global_time	23
9.4.4	ECOA:duration	23
9.4.5	ECOA:timestamp	23
9.4.6	ECOA:log	24
9.4.7	ECOA:module_states_type	24
9.4.8	ECOA:module_error_type	24

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

9.4.9	ECOA:error_id	24
9.4.10	ECOA:asset_id	24
9.4.11	ECOA:asset_type	25
9.4.12	ECOA:error_type	26
9.4.13	ECOA:recovery_action_type	26
9.4.14	ECOA:pinfo_filename	26
9.4.15	ECOA:seek_whence_type	27
10	Module Interface	27
10.1	Operations	27
10.1.1	Request-response	27
10.1.1.1	Request Received	27
10.1.1.2	Response received	27
10.1.2	Versioned Data Updated	28
10.1.3	Event Received	28
10.2	Module Lifecycle	29
10.2.1	Generic Module API	29
10.2.1.1	Initialize_Received	29
10.2.1.2	Start_Received	29
10.2.1.3	Stop_Received	29
10.2.1.4	Shutdown_Received	30
10.2.1.5	Reinitialize_Received	30
10.2.2	Supervision Module API	30
10.3	Service Availability	31
10.3.1	Service Availability Changed	31
10.3.2	Service Provider Changed	31
10.4	Error_notification at application level	31
10.5	Error_notification at Fault Handler level	32
11	Container Interface	32
11.1	Operations	32
11.1.1	Request Response	32
11.1.1.1	Response Send	32
11.1.1.2	Synchronous Request	33
11.1.1.3	Asynchronous Request	33
11.1.2	Versioned Data	33
11.1.2.1	Get Read Access	34
11.1.2.2	Release Read Access	34
11.1.2.3	Get Write Access	34

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

11.1.2.4	Cancel Write Access	35
11.1.2.5	Publish Write Access	35
11.1.3	Events	35
11.1.3.1	Send	35
11.2	Properties	36
11.2.1	Get Value	36
11.2.2	Expressing Property Values	36
11.2.3	Example of Defining and Using Properties	36
11.3	Module Lifecycle	36
11.3.1	Non-Supervision Container API	36
11.3.2	Supervision Container API	37
11.4	Service Availability	38
11.4.1	Set Service Availability (Server Side)	38
11.4.2	Get Service Availability (Client Side)	38
11.5	Logging and Fault Management	39
11.5.1	Log_Trace	39
11.5.2	Log_Debug	39
11.5.3	Log_Info	39
11.5.4	Log_Warning	40
11.5.5	Raise_Error	40
11.5.6	Raise_Fatal_Error	40
11.6	Time Services	40
11.6.1	Get_Relative_Local_Time	40
11.6.2	Get_UTC_Time	41
11.6.3	Get_Absolute_System_Time	41
11.6.4	Get_Relative_Local_Time_Resolution	41
11.6.5	Get_UTC_Time_Resolution	41
11.6.6	Get_Absolute_System_Time_Resolution	42
11.7	Persistent Information management (PINFO)	42
11.7.1	PINFO read	42
11.7.2	PINFO write	42
11.7.3	PINFO seek	43
11.7.4	Example of Defining Private PINFO	43
11.7.5	Example of Defining Public PINFO	43
11.8	Recovery Action	43
11.9	Save Warm Start Context	43
12	Container Types	44

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

12.1.1	Versioned Data Handles	44
12.1.2	Service ID Enumeration	44
12.1.3	Reference ID Enumeration	45
13	External Interface	45
14	Reference C Header	45

Figures

Figure 1	C Files Organization	4
----------	----------------------	---

Tables

Table 1	Filename Mapping	4
Table 2	Method of Passing Parameters	14
Table 3	C Basic Type Mapping	18
Table 4	C Predefined Constants	19

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

0 Introduction

This Architecture Specification provides the specification for creating ECOA[®]-based systems. It describes the standardised programming interfaces and data-model that allow a developer to construct an ECOA[®]-based system. It uses terms defined in the Definitions (Architecture Specification Part 2). The details of the other documents comprising the rest of this Architecture Specification can be found in Section 3.

This document is Part 8 of the Architecture Specification, and describes the C (ref ISO/IEC 9899:1999(E)) language binding for the module and container APIs that facilitate communication between the module instances and their container in an ECOA[®] system.

- Section 6 describes the Module to Language Mapping;
- Section 7 describes the method of passing parameters;
- Section 8 describes the Module Context;
- Section 9 describes the basic types that are provided and the types that can be derived from them;
- Section 10 describes the Module Interface;
- Section 11 describes the Container Interface;
- Section 12 describes the Container Types;
- Section 13 describes the External Interface;
- Section 14 provides a reference C header for the ECOA[®] namespace, usable in any C binding implementation;

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

1 Scope

This Architecture Specification specifies a uniform method for design, development and integration of software systems using a component oriented approach.

2 Warning

This specification represents the output of a research programme and contains mature high-level concepts, though low-level mechanisms and interfaces remain under development and are subject to change. This standard of documentation is recommended as appropriate for limited lab-based evaluation only. Product development based on this standard of documentation is not recommended.

3 Normative References

Architecture Specification Part 1	IAWG-ECOА-TR-001 / DGT 144474 Issue 5 Architecture Specification Part 1 – Concepts
Architecture Specification Part 2	IAWG-ECOА-TR-012 / DGT 144487 Issue 5 Architecture Specification Part 2 – Definitions
Architecture Specification Part 3	IAWG-ECOА-TR-007 / DGT 144482 Issue 5 Architecture Specification Part 3 – Mechanisms
Architecture Specification Part 4	IAWG-ECOА-TR-010 / DGT 144485 Issue 5 Architecture Specification Part 4 – Software Interface
Architecture Specification Part 5	IAWG-ECOА-TR-008 / DGT 144483 Issue 5 Architecture Specification Part 5 – High Level Platform Requirements
Architecture Specification Part 6	IAWG-ECOА-TR-006 / DGT 144481 Issue 5 Architecture Specification Part 6 – ECOА® Logical Interface
Architecture Specification Part 7	IAWG-ECOА-TR-011 / DGT 144486 Issue 5 Architecture Specification Part 7 – Metamodel
Architecture Specification Part 8	IAWG-ECOА-TR-004 / DGT 144477 Issue 5 Architecture Specification Part 8 – C Language Binding
Architecture Specification Part 9	IAWG-ECOА-TR-005 / DGT 144478 Issue 5 Architecture Specification Part 9 – C++ Language Binding

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

Architecture Specification Part 10	IAWG-ECOА-TR-003 / DGT 144476 Issue 5 Architecture Specification Part 10 – Ada Language Binding
Architecture Specification Part 11	IAWG-ECOА-TR-031 / DGT 154934 Issue 5 Architecture Specification Part 11 – High Integrity Ada Language Binding
ISO/IEC 8652:1995(E) with COR.1:2000	Ada95 Reference Manual Issue 1
ISO/IEC 9899:1999(E)	Programming Languages – C
ISO/IEC 14882:2003(E)	Programming Languages C++
SPARK_LRM	The SPADE Ada Kernel (including RavenSPARK) Issue 7.3

4 Definitions

For the purpose of this standard, the definitions given in Architecture Specification Part 2 apply.

5 Abbreviations

API	Application Programming Interface
ECOА	European Component Oriented Architecture. ECOА® is a registered trademark.
PINFO	Persistent Information
UTC	Coordinated Universal Time
XML	eXtensible Markup Language

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

6 Module to Language Mapping

This section gives an overview of the Module Interface and Container Interface APIs, in terms of the filenames and the overall structure of the files.

With structured languages such as C, the Module Interface will be composed of a set of functions corresponding to each entry-point of the Module Implementation. The declaration of these functions will be accessible in a header file called `#module_impl_name#.h`. The names of these functions shall begin with the prefix `"#module_impl_name#_"`.

The Container Interface will be composed of a set of functions corresponding to the required operations. The declaration of these functions will be accessible in a header file called `#module_impl_name#_container.h`. The names of these functions shall begin with the prefix `"#module_impl_name#_container_"`.

The Container Types will be composed of the types which the Module Implementation needs in order to declare, use and store various handles. The declaration of these types will be accessible in a header file called `#module_impl_name#_container_types.h`. The names of these types shall begin with the prefix `"#module_impl_name#_container_"`.

It is important to ensure that the names of these functions and types do not clash within a single protection domain. One way to achieve this is for each component supplier to define the module implementation name prefixed by a unique identifier. In this way they can manage the uniqueness of their own components, and the mixing of different supplier components within a protection domain is possible.

A dedicated structure named `#module_impl_name#_context`, and called Module Context structure in the rest of the document will be generated by the ECOA toolchain in the Module Container header (`#module_impl_name#_container.h`) and shall be extended by the Module implementer to contain all the user variables of the Module. This structure will be allocated by the container before Module Instance start-up and passed to the Module Instance in each activation entry-point (i.e. received events, received request-response and asynchronous request-response sent call-back).

Figure 1 shows the relationship between the C files mentioned above, whilst Table 1 shows the filename mappings.

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

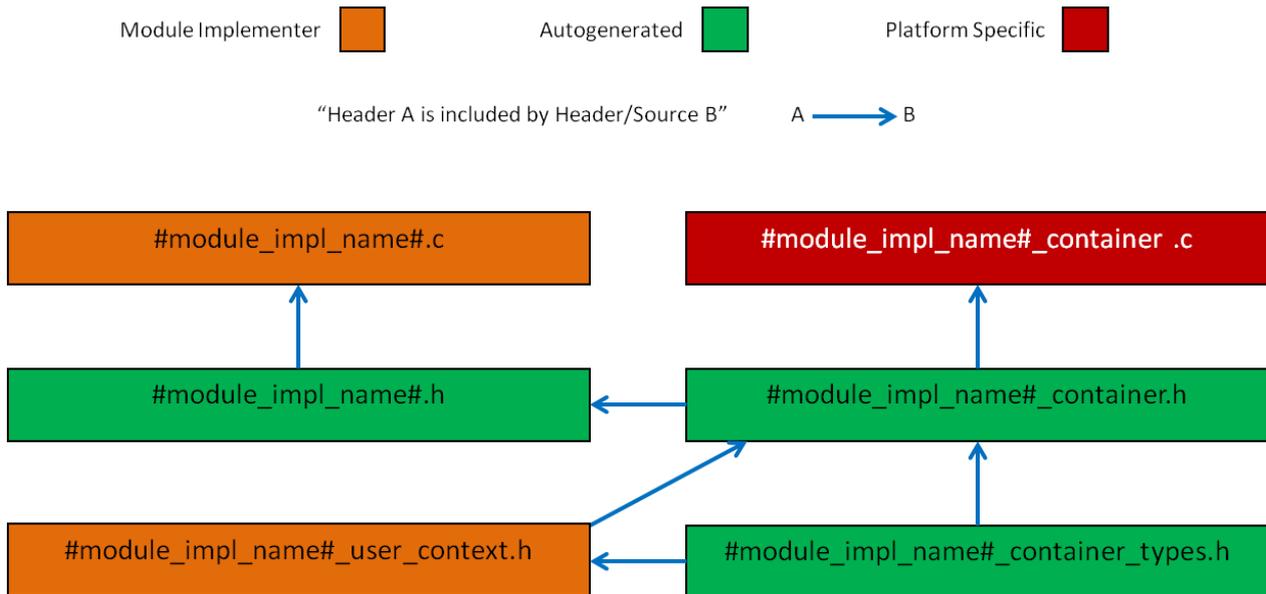


Figure 1 C Files Organization

Table 1 Filename Mapping

Filename	Use
<code>#module_impl_name#.h</code>	Module Interface declaration (handlers entry points provided by the module and callable by the container)
<code>#module_impl_name#.c</code>	Module Implementation (implements the module interface)
<code>#module_impl_name#_container.h</code>	Container Interface declaration (functions provided by the container and callable by the module) Module Context type declaration
<code>#module_impl_name#_container.c</code>	Container Implementation: This source (.c) implements the Container Interface. It is out of scope of this document, as it is platform dependent. The Container may actually be a collection of source files depending upon the platform implementation.
<code>#module_impl_name#_container_types.h</code>	Container Types declaration (container-level data types usable by the module) These types are related to the Container for a Module Implementation and are declared in the <code>#module_impl_name#_container</code> namespace.

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

Filename	Use
<code>#module_impl_name#_user_context.h</code>	User extensions to Module Context. These types are related to the Module Implementation and are declared within the <code>#module_impl_name#</code> namespace.

Templates for the files in Table 1 are provided in the following sections:

6.1 Module Interface Template

```

/*
 * @file #module_impl_name#.h
 * Module Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

#if !defined(_#MODULE_IMPL_NAME#_H)
#define _#MODULE_IMPL_NAME#_H

#if defined(__cplusplus)
extern "C" {
#endif /* __cplusplus */

/* Standard Types */
#include <EOA.h>
/* Additionally created types */
#include #additionally_created_types#
/* Include container header */
#include "#module_impl_name#_container.h"
/* Include container types */
#include "#module_impl_name#_container_types.h"
/* Include user context */
#include "#module_impl_name#_user_context.h"

void #module_impl_name#__INITIALIZE__received
    (#module_impl_name#__context* context);

void #module_impl_name#__START__received
    (#module_impl_name#__context* context);

void #module_impl_name#__STOP__received
    (#module_impl_name#__context* context);

void #module_impl_name#__SHUTDOWN__received
    (#module_impl_name#__context* context);

```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```

void #module_impl_name# __REINITIALIZE__received
    (#module_impl_name# __context* context);

/* Event operation handlers specifications */
#list_of_event_operations_specifications#

/* Request-Response operation handlers specifications */
#list_of_request_response_operations_specifications#

/* Versioned Data Notifying operation handlers specifications */
#list_of_versioned_data_notifying_operations_specifications#

/* If this is a Supervision module then additional APIs are declared
 * Supervision Module API for lifecycle operations (one set per
 * non-supervision module instance, following the order that the module
 * instances are defined in the XML)
 *   lifecycle_notification__#module_instance_name#
 *   error_notification__#module_instance_name#

 * Supervision Module API for lifecycle operations (one per trigger
 * instance
 *   lifecycle_notification__#module_instance_name#

 * Supervision Module API for lifecycle operations (one per dynamic
 * trigger instance)
 *   lifecycle_notification__#module_instance_name#
 */

/* Availability Changed API call specification(s) if this is a supervision
/* module and the component requires at least one service */
#list_of_service_availability_changed_call_specifications#

/* Provider Changed API call specification(s) if this is a supervision */
/* module and the component requires at least one service */
#list_of_service_provider_changed_call_specifications#

/* Error notification handlers specifications for supervised modules if this */
/* module is a supervision module */
#list_of_error_notification_operations_specifications#

/* Error notification handler specification if this module is a */
/* Fault Handler */
#error_notification_operation_specification#

```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```

#if defined(__cplusplus)
}
#endif /* __cplusplus */

#endif /* _#MODULE_IMPL_NAME#_H */

```

```

/*
 * @file #module_impl_name#.c
 * Module Interface for Module #module_impl_name#
 * This file can be considered a template with the operation stubs
 * auto generated by the ECOA toolset and filled in by the module
 * developer.
 */

/* Include module interface header */
#include "#module_impl_name#.h"

/* Event operation handlers */
#list_of_event_operations#

/* Request-Response operation handlers */
#list_of_request_response_operations#

/* Lifecycle operation handlers */
#list_of_lifecycle_operations#

/* Error notification handlers for supervised modules if this module is a */
/* supervision module */
#list_of_error_notification_operations#

/* Error notification handler if this module is a Fault Handler */
#error_notification_operation#

```

6.2 Container Interface Template

```

/* @file #module_impl_name#_container.h
 * Container Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

#if !defined(_#MODULE_IMPL_NAME#_CONTAINER_H)
#define _#MODULE_IMPL_NAME#_CONTAINER_H

```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```

#if defined(__cplusplus)
extern "C" {
#endif /* __cplusplus */

/* Standard Types */
#include <EOA.h>
/* Additionally created types */
#include #additionally_created_types#
/* Container Types */
#include "#module_impl_name#_container_types.h"
/* User Context */
#include "#module_impl_name#_user_context.h"

/* Incomplete definition of the technical (platform-dependent) part of the */
/* context (it will be defined privately by the container) */
struct #module_impl_name#_platform_hook;

/* Module Context structure declaration */
typedef struct
{
    /*
     * the date of the calling operation
     */
    ECOA__timestamp operation_timestamp;

    /*
     * Other container technical data will be accessible through the pointer
     * defined here
     */
    struct #module_impl_name#_platform_hook *platform_hook;

    /* the type #module_impl_name#_user_context shall be defined by the user
     * in the #module_impl_name#_user_context.h file to carry the module
     * implementation private data
     */
    #module_impl_name#_user_context user;

    #module_impl_name#_warm_start_context warm_start;
} #module_impl_name#_context;

void #module_impl_name#_container__log_trace
    (#module_impl_name#_context* context,

```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```

    const ECOA__log log);

void #module_impl_name#_container__log_debug
    (#module_impl_name#__context* context,
     const ECOA__log log);

void #module_impl_name#_container__log_info
    (#module_impl_name#__context* context,
     const ECOA__log log);

void #module_impl_name#_container__log_warning
    (#module_impl_name#__context* context,
     const ECOA__log log);

void #module_impl_name#_container__raise_error
    (#module_impl_name#__context* context,
     const ECOA__log log);

void #module_impl_name#_container__raise_fatal_error
    (#module_impl_name#__context* context,
     const ECOA__log log);

void #module_impl_name#_container__get_relative_local_time
    (#module_impl_name#__context* context,
     ECOA__hr_time *relative_local_time);

ECOA__return_status #module_impl_name#_container__get.UTC_time
    (#module_impl_name#__context* context,
     ECOA__global_time *utc_time);

ECOA__return_status #module_impl_name#_container__get_absolute_system_time
    (#module_impl_name#__context* context,
     ECOA__global_time *absolute_system_time);

void #module_impl_name#_container__get_relative_local_time_resolution
    (#module_impl_name#__context* context,
     ECOA__duration *relative_local_time_resolution);

void #module_impl_name#_container__get.UTC_time_resolution
    (#module_impl_name#__context* context,
     ECOA__duration *utc_time_resolution);

void #module_impl_name#_container__get_absolute_system_time_resolution
    (#module_impl_name#__context* context,

```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```

        ECOA__duration *absolute_system_time_resolution);

/* Event operation call specifications */
#event_operation_call_specifications#

/* Request-response call specifications */
#request_response_call_specifications#

/* Versioned data call specifications */
#versioned_data_call_specifications#

/* Functional parameters call specifications */
#properties_call_specifications#

/* Recovery action service API call specification if this is a */
/* Fault Handler module */
#recovery_action_call_specification#

/* Get Service Availability API call specification(s) if this is a */
/* supervision module and the component requires at least one service */
#list_of_get_service_availability_call_specifications#

/* Set Service Availability API call specification(s) if this is a */
/* supervision module and the component provides at least one service */
#list_of_set_service_availability_call_specifications#

/* If this is a Supervision module then additional APIs are declared
 * Supervision Module API for lifecycle operations (one set per non-
 * supervision module instance, following the order that the module
 * instances are defined in the XML, then trigger instance, then
 * dynamic trigger instance)
 * get_lifecycle_state_#module_instance_name#
 * STOP__#module_instance_name#
 * START__#module_instance_name#
 * INITIALIZE__#module_instance_name#
 * SHUTDOWN__#module_instance_name#
 */

/* Persistent Information management operations */
#PINFO_read_call_specifications#
#PINFO_write_call_specifications#
#PINFO_seek_call_specifications#

/* Context management operation */

```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```
#save_warm_start_context_operation#

#if defined(__cplusplus)
}
#endif /* __cplusplus */

#endif /* _#MODULE_IMPL_NAME#_CONTAINER_H */
```

6.3 Container Types Template

```
/* @file #module_impl_name#_container_types.h
 * Container Types header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */
#if !defined(_#MODULE_IMPL_NAME#_CONTAINER_TYPES_H)
#define _#MODULE_IMPL_NAME#_CONTAINER_TYPES_H

#if defined(__cplusplus)
extern "C" {
#endif /* __cplusplus */

#include <ECOA.h>

/* The following describes the data types generated with regard to APIs:
 * For any Versioned Data Read Access: data_handle
 * For any Versioned Data Write Access: data_handle
 */

/* If this is a Supervision module then additional data types are declared:
 * Service Availability API:
 * if the component has at least one required service
 * * reference_id enumerations
 * if the component has at least one provided service
 * * service_id enumerations
 */

#if defined(__cplusplus)
}
#endif /* __cplusplus */

#endif /* _#MODULE_IMPL_NAME#_CONTAINER_TYPES_H */
```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

6.4 User Module Context Template

```
/* @file #module_impl_name#_user_context.h
 * This is an example of a user defined User Module context
 */
#if !defined(_MODULE_IMPL_NAME#_USER_CONTEXT_H)
#define _MODULE_IMPL_NAME#_USER_CONTEXT_H

#if defined(__cplusplus)
extern "C" {
#endif /* __cplusplus */

/* Standard Types */
#include <EOA.h>
/* Additionally created types */
#include #additionally_created_types#
/* Container Types */
#include "#module_impl_name#_container_types.h"

/* User Module Context structure example */
typedef struct
{
    /* declare the User Module Context "local" data here */
} #module_impl_name#_user_context;

/* Warm Start Module Context structure example */
typedef struct
{
    /* declare the Warm Start Module Context data here */
} #module_impl_name#_warm_start_context;

#if defined(__cplusplus)
}
#endif /* __cplusplus */

#endif /* _MODULE_IMPL_NAME#_USER_CONTEXT_H */
```

6.5 Guards

In C, all of the declarations within header files shall be surrounded within the following block to make the code compatible with C++, and to avoid multiple inclusions:

```
#if !defined(_#macro_protection_name#_H)
```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```
#define _#macro_protection_name#_H

#if defined(__cplusplus)
extern "C" {
#endif /* __cplusplus */

/* all the declarations shall come here */

#if defined(__cplusplus)
}
#endif /* __cplusplus */

#endif /* _#macro_protection_name#_H */
```

Where `#macro_protection_name#` is the name of the header file in capital letters and without the `.h` extension.

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

7 Parameters

This section describes the manner in which parameters are passed in C:

- Input parameters defined with a simple type (i.e. basic, enum or actual simple type) will be passed by value, output parameters defined with a simple type will be passed as pointers
- Input parameters defined with a complex type will be passed as pointers to a const; output parameters defined with a complex type will be passed as pointers.

Table 2 Method of Passing Parameters

	Input parameter	Output parameter
Simple type	By value	Pointer
Complex type	Pointer to const	Pointer

Within the API bindings, parameters will be passed as constant if the behaviour of the specific API warrants it. This will override the normal conventions defined above.

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

8 Module Context

In the C language, the Module Context is a structure which holds both the user local data (called “User Module Context” and “Warm Start Context”) and infrastructure-level technical data (which is implementation dependant). The structure is defined in the Container Interface.

Any language type can be used within the contexts (including ECOA ones).

The following shows the C syntax for the Module Context:

```
/* @file "#module_impl_name#_container.h"
 * Container Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

/* Container Types */
#include "#module_impl_name#_container_types.h"

#include "#module_impl_name#_user_context.h"

/* Incomplete definition of the technical (platform-dependent) part of the */
/* context (it will be defined privately by the container) */
struct #module_impl_name#__platform_hook;

/* Module Context structure declaration */
typedef struct
{
    /*
     * the date of the calling operation
     */
    ECOA__timestamp operation_timestamp;

    /*
     * Other container technical data will accessible through the pointer */
    /* defined here
     */
    struct #module_impl_name#__platform_hook *platform_hook;

    /* the type #module_impl_name#_user_context shall be defined by the user
     * in the #module_impl_name#_user_context.h file to carry the module
     * implementation private data
     */
    #module_impl_name#_user_context user;

    /*
     * the type #module_impl_name#_warm_start_context shall be defined by the
     * user in the #module_impl_name#_user_context.h file to carry the module

```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```

    * implementation warm start private data
    */
    #module_impl_name#_warm_start_context warm_start;
} #module_impl_name#__context;

```

8.1 User Module Context

The following shows the C syntax for the Module User Context (including an example data item; myCounter) and the Module Warm Start Context (including an example data item myData and validity flag warm_start_valid):

```

/* @file #module_impl_name#_user_context.h
 * This is an example of a user defined User Module context
 */

/* Container Types */
#include "#module_impl_name#_container_types.h"

/* User Module Context structure example */
typedef struct
{
    /* declare the User Module Context "local" data here */
    int myCounter;
} #module_impl_name#_user_context;

/* Warm Start context structure example */
typedef struct {

    /* declare the warm start data here */
    ECOA_boolean8 warm_start_valid; /* example of validity flag */
    unsigned long my_data;
} #module_impl_name#_warm_start_context;

```

Data declared within the Module User Context and the Module Warm Start Context can be of any type.

The following example illustrates the usage of the Module context in the entry-point corresponding to an event-received:

```

/* @file "#module_impl_name#.c"
 * Generic operation implementation example
 */

void #module_impl_name#_#operation_name#_received
    (#module_impl_name#_context* context)
{

```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```

/* To be implemented by the module */

/*
 * ...
 * increments a local user defined counter:
 */
context->user.myCounter++;
}

```

The user extensions to Module Context need to be known by the container in order to allocate the required memory area. This means that the component supplier is required to provide the associated header file. If the supplier does not want to divulge the original contents of the header file, then:

- It may be replaced by an array with a size equivalent to the original data; or
- Memory management may be dealt with internally to the code, using memory allocation functions¹.

To extend the Module Context structure, the module implementer shall define the User Module Context structure, named `#module_impl_name#_user_context`, in a header file called `#module_impl_name#_user_context.h`. All the private data of the Module Implementation shall be added as members of this structure, and will be accessible within the “user” field of the Module Context.

The Module Context structure will be passed by the Container to the Module as the first parameter for each operation (i.e. received events, received request-response and asynchronous request-response sent call-back). The Module Context defines the instance of the Module being invoked by the operation. This structure shall be passed by the Module to all Container Interface API functions it can call.

The Module Context will also be used by the Container to automatically timestamp operations on the emitter/requester side using an ECOA-provided attribute called `operation_timestamp`. The Container also provides a utility function to retrieve this from the Module Context. The way this structure is populated by the ECOA infrastructure is detailed in Architecture Specification Part 3.

1 The current ECOA **Erreur ! Source du renvoi introuvable.** does not specify any memory allocation function. So, his case may lead to non-portable code.

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an ‘as is’ basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

9 Types

This section describes the convention for creating namespaces, and how the ECOA basic types and derived types are represented in C

9.1 Filenames and Namespace

The type definitions are contained within one or more namespaces: all types for specific namespace defined in `#namespace1[#__namespace#].types.xml` shall be placed in a file called `#namespace1[#__namespace#].h`

The complete name of the declaration of a variable name and type name will be computed by prefixing these names with the names of all the namespaces from the first level to the last level, separated with underscores as illustrated below. In the C language, this naming rule will be used for each variable or type declaration to create the complete variable name, reflecting the namespaces onto which it is defined.

Below is an example of a simple type being defined within a nested namespace in C.

```
/*
 * @file #namespace1#[__#namespace#].h
 * Data-type declaration file
 * Generated automatically from specification; do not modify here
 */

typedef #basic_type_name#
    #namespace1#[__#namespace#]__#simple_type_name#;
```

9.2 Basic Types

The basic types, shown in Table 3, shall be located in the “ECOA” namespace and hence in ECOA.h which shall also contain definitions of the pre-defined constants, e.g. that define constants to represent the true and false values of the basic Boolean type, that are shown in Table 4.

Table 3 C Basic Type Mapping

ECOA Basic Type	C type
ECOA:boolean8	ECOA__boolean8
ECOA:int8	ECOA__int8
ECOA:char8	ECOA__char8
ECOA:byte	ECOA__byte
ECOA:int16	ECOA__int16
ECOA:int32	ECOA__int32
ECOA:int64	ECOA__int64
ECOA:uint8	ECOA__uint8
ECOA:uint16	ECOA__uint16
ECOA:uint32	ECOA__uint32
ECOA:uint64	ECOA__uint64

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

ECO A Basic Type	C type
ECO A:float32	ECO A__float32
ECO A:double64	ECO A__double64

The data-types in Table 3 are fully defined using the predefined constants shown in Table 4:

Table 4 C Predefined Constants

C Type	C constant
ECO A__boolean8	ECO A__TRUE ECO A__FALSE
ECO A__int8	ECO A__INT8_MIN ECO A__INT8_MAX
ECO A__char8	ECO A__CHAR8_MIN ECO A__CHAR8_MAX
ECO A__byte	ECO A__BYTE_MIN ECO A__BYTE_MAX
ECO A__int16	ECO A__INT16_MIN ECO A__INT16_MAX
ECO A__int32	ECO A__INT32_MIN ECO A__INT32_MAX
ECO A__int64	ECO A__INT64_MIN ECO A__INT64_MAX
ECO A__uint8	ECO A__UINT8_MIN ECO A__UINT8_MAX
ECO A__uint16	ECO A__UINT16_MIN ECO A__UINT16_MAX
ECO A__uint32	ECO A__UINT32_MIN ECO A__UINT32_MAX
ECO A__uint64	ECO A__UINT64_MIN ECO A__UINT64_MAX
ECO A__float32	ECO A__FLOAT32_MIN ECO A__FLOAT32_MAX
ECO A__double64	ECO A__DOUBLE64_MIN ECO A__DOUBLE64_MAX

The data types described in the following sections are also defined in the ECO A namespace.

9.3 Derived Types

9.3.1 Simple Types

The syntax for defining a Simple Type #simple_type_name# refined from a Basic Type #basic_type_name# in C is defined below. Note that as namespaces are not supported in the C language, the actual name of the type (known as the complete type (see para. 9.1) and referred to here by prefixing complete_) will be computed by prefixing the namespaces in which it is included as described previously.

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```
typedef #basic_type_name# #complete_simple_type_name#;
```

If the optional #minRange# or #maxRange# fields are set, the previous type definition must be followed by the minRange or maxRange constant declarations as follows:

```
#define #complete_simple_type_name#_minRange (#minrange_value#)
#define #complete_simple_type_name#_maxRange (#maxrange_value#)
```

9.3.2 Constants

The syntax for the declaration of a Constant called “#contant_name#” in C is shown below. Note that the #type_name# is not used in the C binding. In addition, namespaces are not supported in the C language, so the name of the constant (known as the complete name (see para. 9.1) and referred to here by prefixing complete_) will be computed by prefixing the namespaces in which it is included as described previously.

```
#define #complete_constant_name# (#constant_value#)
```

where #constant_value# is either an integer or floating point value described by the XML description.

9.3.3 Enumerations

The C syntax for defining an enumerated type named #enum_type_name#, with a set of labels named from #enum_type_name#_#enum_value_name_1# to #enum_type_name#_#enum_value_name_n# and a set of optional values of the labels named #enum_value_value_1# ... #enum_value_value_n# is defined below. Note that as namespaces are not supported in the C language, the actual name of the type (known as the complete type (see para. 9.1) and referred to here by prefixing complete_) will be computed by prefixing the namespaces in which it is included as described previously.

```
typedef #basic_type_name# #complete_enum_type_name#;

#define #complete_enum_type_name#_#enum_value_name_1# (#enum_value_value_1#)
#define #complete_enum_type_name#_#enum_value_name_2# (#enum_value_value_2#)
#define #complete_enum_type_name#_#enum_value_name_3# (#enum_value_value_3#)
/*...*/
#define #complete_enum_type_name#_#enum_value_name_n# (#enum_value_value_n#)
```

Where:

#basic_type_name# is either ECOA__boolean8, ECOA__int8, ECOA__char8, ECOA__byte, ECOA__int16, ECOA__int32, ECOA__int64, ECOA__uint8, ECOA__uint16, ECOA__uint32 or ECOA__uint64.

#complete_enum_type_name# is computed by prefixing the name of the type with the namespaces and using ‘_’ as separator (see para. 9.1)

#enum_value_value_X# is the optional value of the label. If not set, this value is computed from the previous label value, by adding 1 (or set to 0 if it is the first label of the enumeration).

9.3.4 Records

For a record type named #record_type_name# with a set of fields named #field_name1# to #field_namen# of given types #data_type_1# to #data_type_n#, the syntax is given below. Note that as namespaces are not supported in the C language, the actual name of the type (known as the complete type (see para. 9.1)

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an ‘as is’ basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

and referred to here by prefixing `complete_`) will be computed by prefixing the namespaces in which it is included as described previously. The order of fields in the struct shall follow the order of fields used in the XML definition.

```
typedef struct
{
    #data_type_1# #field_name1#;
    #data_type_2# #field_name2#;
    /*...*/
    #data_type_n# #field_namen#;
} #complete_record_type_name#;
```

9.3.5 Variant Records

For a Variant Record named `#variant_record_type_name#` containing a set of fields (named `#field_name1#` to `#field_namen#`) of given types `#data_type_1#` to `#data_type_n#` and other optional fields (named `#optional_field_name1#` to `#optional_field_namen#`) of type (`#optional_type_name1#` to `#optional_type_namen#`) with selector `#selector_name#`, the syntax is given below.

Note that as namespaces are not supported in the C language, the actual name of the type (known as the complete type (see para. 9.1) and referred to here by prefixing `complete_`) will be computed by prefixing the namespaces in which it is included as described previously.

The order of fields in the struct shall follow the order of fields used in the XML definition.

```
/*
 * #complete_selector_type_name# can be of any simple basic type, or an */
 * enumeration
 */

typedef struct{

    #complete_selector_type_name# #selector_name#;

    #data_type_1# #field_name1#; /* for each <field> element */
    #data_type_2# #field_name2#;
    /*...*/
    #data_type_n# #field_namen#;

    union {
        #optional_type_name1# #optional_field_name1#; /* for each <union>
        element */
        #optional_type_name2# #optional_field_name2#;
        /*...*/
        #optional_type_namen# #optional_field_namen#;
    } u_#selector_name#;
```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```
} #complete_variant_record_type_name#;
```

9.3.6 Fixed Arrays

The C syntax for a fixed array named #array_type_name# of maximum size #max_number# and element type of #data_type_name# is given below. Note that as namespaces are not supported in the C language, the actual name of the type (known as the complete type (see para. 9.1) and referred to here by prefixing complete_) will be computed by prefixing the namespaces in which it is included as described previously.

A macro called #complete_array_type_name#_MAXSIZE will be defined to specify the size of the array.

```
#define #complete_array_type_name#_MAXSIZE #max_number#  
typedef #complete_data_type_name#  
#complete_array_type_name#[#complete_array_type_name#_MAXSIZE];
```

9.3.7 Variable Arrays

The C syntax for a variable array (named #var_array_type_name#) with maximum size #max_number#, elements with type #data_type_name# and a current size of current_size is given below. Note that as namespaces are not supported in the C language, the actual name of the type (known as the complete type (see para. 9.1) and referred to here by prefixing complete_) will be computed by prefixing the namespaces in which it is included as described previously.

```
#define #complete_var_array_type_name#_MAXSIZE #max_number#  
typedef struct {  
    ECOA__uint32 current_size;  
    #data_type_name# data[#complete_var_array_type_name#_MAXSIZE];  
} #complete_var_array_type_name#;
```

9.4 Predefined Types

9.4.1 ECOA:return_status

In C ECOA:return_status translates to ECOA__return_status, with the enumerated values shown below:

```
typedef ECOA__uint32 ECOA__return_status;  
#define ECOA__return_status_OK (0)  
#define ECOA__return_status_INVALID_HANDLE (1)  
#define ECOA__return_status_DATA_NOT_INITIALIZED (2)  
#define ECOA__return_status_NO_DATA (3)  
#define ECOA__return_status_INVALID_IDENTIFIER (4)  
#define ECOA__return_status_NO_RESPONSE (5)  
#define ECOA__return_status_OPERATION_ALREADY_PENDING (6)  
#define ECOA__return_status_INVALID_SERVICE_ID (7)  
#define ECOA__return_status_CLOCK_UNSYNCHRONIZED (8)  
#define ECOA__return_status_INVALID_TRANSITION (9)  
#define ECOA__return_status_RESOURCE_NOT_AVAILABLE (10)
```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```
#define ECOA__return_status_OPERATION_NOT_AVAILABLE (11)
#define ECOA__return_status_PENDING_STATE_TRANSITION (12)
#define ECOA__return_status_INVALID_PARAMETER (13)
```

9.4.2 ECOA:hr_time

The binding for time is:

```
typedef struct
{
    ECOA__uint32 seconds; /* Seconds */
    ECOA__uint32 nanoseconds; /* Nanoseconds*/
} ECOA__hr_time;
```

9.4.3 ECOA:global_time

Global time is represented as:

```
typedef struct
{
    ECOA__uint32 seconds; /* Seconds */
    ECOA__uint32 nanoseconds; /* Nanoseconds*/
} ECOA__global_time;
```

9.4.4 ECOA:duration

Duration is represented as:

```
typedef struct
{
    ECOA__uint32 seconds; /* Seconds */
    ECOA__uint32 nanoseconds; /* Nanoseconds*/
} ECOA__duration;
```

9.4.5 ECOA:timestamp

The following binding shows how the timestamp, for operations etc, is represented in C:

```
typedef struct
{
    ECOA__uint32 seconds; /* Seconds */
    ECOA__uint32 nanoseconds; /* Nanoseconds*/
} ECOA__timestamp;
```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

9.4.6 ECOA:log

The syntax for a log in C is:

```
#define ECOA__LOG_MAXSIZE 256

typedef struct {
    ECOA__uint32 current_size;
    ECOA__char8 data[ECOA__LOG_MAXSIZE];
} ECOA__log;
```

9.4.7 ECOA:module_states_type

In C ECOA:module_states_type translates to ECOA__module_states_type, with the enumerated values shown below:

```
typedef ECOA__uint32 ECOA__module_states_type;
#define ECOA__module_states_type_IDLE (0)
#define ECOA__module_states_type_READY (1)
#define ECOA__module_states_type_RUNNING (2)
```

9.4.8 ECOA:module_error_type

In C ECOA:module_error_type translates to ECOA__module_error_type, with the enumerated values shown below:

```
typedef ECOA__uint32 ECOA__module_error_type;
#define ECOA__module_error_type_ERROR (0)
#define ECOA__module_error_type_FATAL_ERROR (1)
```

9.4.9 ECOA:error_id

In C the syntax for an ECOA:error_id is:

```
typedef ECOA__uint32 ECOA__error_id;
```

9.4.10 ECOA:asset_id

In C the syntax for a ECOA:asset_id is:

```
typedef ECOA__uint32 ECOA__asset_id;
```

In C the ECOA:asset_id definitions will be generated in a file named ECOA__FaultHandler.h using the following syntax:

```
/* File ECOA__FaultHandler.h */

#include <ECOA.h>
```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```

#if !defined(__ECOА__FAULTHANDLER_H__)
#define __ECOА__FAULTHANDLER_H__

typedef ECOА__uint32 ECOА__FaultHandler__IDs;

#define ECOА__FaultHandler__IDs_CMP_#component_instance_name1# (#CMP_ID1#)
#define ECOА__FaultHandler__IDs_CMP_#component_instance_name2# (#CMP_ID2#)
#define ECOА__FaultHandler__IDs_CMP_#component_instance_nameN# (#CMP_IDN#)

#define ECOА__FaultHandler__IDs_PD_#protection_domain_name1# (#PD_ID1#)
#define ECOА__FaultHandler__IDs_PD_#protection_domain_name2# (#PD_ID2#)
#define ECOА__FaultHandler__IDs_PD_#protection_domain_nameN# (#PD_IDN#)

#define ECOА__FaultHandler__IDs_NOD_#computing_node_name1# (#NOD_ID1#)
#define ECOА__FaultHandler__IDs_NOD_#computing_node_name2# (#NOD_ID2#)
#define ECOА__FaultHandler__IDs_NOD_#computing_node_nameN# (#NOD_IDN#)

#define ECOА__FaultHandler__IDs_PF_#computing_platform_name1# (#PF_ID1#)
#define ECOА__FaultHandler__IDs_PF_#computing_platform_name2# (#PF_ID2#)
#define ECOА__FaultHandler__IDs_PF_#computing_platform_nameN# (#PF_IDN#)

#define ECOА__FaultHandler__IDs_SOP_#service_operation_name1# (#ELI_UID#)
#define ECOА__FaultHandler__IDs_SOP_#service_operation_name2# (#ELI_UID#)
#define ECOА__FaultHandler__IDs_SOP_#service_operation_nameN# (#ELI_UID#)

#define ECOА__FaultHandler__IDs_#deployment_name1# (#DEP_ID1#)
#define ECOА__FaultHandler__IDs_#deployment_name2# (#DEP_ID2#)
#define ECOА__FaultHandler__IDs_#deployment_nameN# (#DEP_IDN#)

#endif

```

9.4.11 ECOA:asset_type

In C ECOA:asset_type translates to ECOА__asset_type, with the enumerated values shown below:

```

typedef ECOА__uint32 ECOА__asset_type;
#define ECOА__asset_type_COMPONENT (0)
#define ECOА__asset_type_PROTECTION_DOMAIN (1)
#define ECOА__asset_type_NODE (2)
#define ECOА__asset_type_PLATFORM (3)
#define ECOА__asset_type_SERVICE (4)
#define ECOА__asset_type_DEPLOYMENT (5)

```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

9.4.12 ECOA:error_type

In C ECOA:error_type translates to ECOA__error_type, with the enumerated values shown below:

```
typedef ECOA__uint32 ECOA__error_type;
#define ECOA__error_type_RESOURCE_NOT_AVAILABLE (0)
#define ECOA__error_type_UNAVAILABLE (1)
#define ECOA__error_type_MEMORY_VIOLATION (2)
#define ECOA__error_type_NUMERICAL_ERROR (3)
#define ECOA__error_type_ILLEGAL_INSTRUCTION (4)
#define ECOA__error_type_STACK_OVERFLOW (5)
#define ECOA__error_type_DEADLINE_VIOLATION (6)
#define ECOA__error_type_OVERFLOW (7)
#define ECOA__error_type_UNDERFLOW (8)
#define ECOA__error_type_ILLEGAL_INPUT_ARGS (9)
#define ECOA__error_type_ILLEGAL_OUTPUT_ARGS (10)
#define ECOA__error_type_ERROR (11)
#define ECOA__error_type_FATAL_ERROR (12)
#define ECOA__error_type_HARDWARE_FAULT (13)
#define ECOA__error_type_POWER_FAIL (14)
#define ECOA__error_type_COMMUNICATION_ERROR (15)
#define ECOA__error_type_INVALID_CONFIG (16)
#define ECOA__error_type_INITIALISATION_PROBLEM (17)
#define ECOA__error_type_CLOCK_UNSYNCHRONIZED (18)
#define ECOA__error_type_UNKNOWN_OPERATION (19)
#define ECOA__error_type_OPERATION_OVERRATED (20)
#define ECOA__error_type_OPERATION_UNDERRATED (21)
```

9.4.13 ECOA:recovery_action_type

In C ECOA:recovery_action_type translates to ECOA__recovery_action_type, with the enumerated values shown below:

```
typedef ECOA__uint32 ECOA__recovery_action_type;
#define ECOA__recovery_action_type_SHUTDOWN (0)
#define ECOA__recovery_action_type_COLD_RESTART (1)
#define ECOA__recovery_action_type_WARM_RESTART (2)
#define ECOA__recovery_action_type_CHANGE_DEPLOYMENT (3)
```

9.4.14 ECOA:pinfo_filename

The syntax for a pinfo_filename in C is:

```
#define ECOA__PINFO_FILENAME_MAXSIZE 256

typedef struct {
    ECOA__uint32 current_size;
```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```
    ECOA__char8  data[ECOA__PINFO_FILENAME_MAXSIZE];
} ECOA__pinfo_filename;
```

9.4.15 ECOA:seek_whence_type

In C ECOA:seek_whence_type translates to ECOA__seek_whence_type, with the enumerated values shown below:

```
typedef ECOA__uint32 ECOA__seek_whence_type;
#define ECOA__seek_whence_type_SEEK_SET (0)
#define ECOA__seek_whence_type_SEEK_CUR (1)
#define ECOA__seek_whence_type_SEEK_END (2)
```

10 Module Interface

10.1 Operations

This section contains details of the operations that comprise the module API i.e. the operations that can be invoked by the container on a module.

10.1.1 Request-response

10.1.1.1 Request Received

The following is the C syntax for invoking a request received by a module instance when a response is required, where #module_impl_name# is the name of the module implementation providing the service and #operation_name# is the operation name. The same syntax is applicable for both synchronous and asynchronous request-response operations.

```
/*
 * @file #module_impl_name#.h
 * Module Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

void #module_impl_name#_#operation_name#_request_received
    (#module_impl_name#_context* context,
     const ECOA__uint32 ID,
     const #request_parameters#);
```

10.1.1.2 Response received

The following is the C syntax for an operation used by the container to send the response to an asynchronous request response operation to the module instance that originally issued the request, where #module_impl_name# is the name of the module implementation providing the service and #operation_name# is the operation name. (The reply to a synchronous request response is provided by the return of the original request).

```
/*
```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```

* @file #module_impl_name#.h
* Module Interface header for Module #module_impl_name#
* Generated automatically from specification; do not modify here
*/

void #module_impl_name#_#operation_name#_#response_received
(#module_impl_name#_#context# context,
 const ECOA__uint32 ID,
 const ECOA__return_status status,
 const #response_parameters#);

```

The “#response_parameters#” are passed as “const” parameters, so they are not modified by the container.

10.1.2 Versioned Data Updated

The following is the C syntax that is used by the container to inform a module instance that reads an item of versioned data that new data has been written.

```

/*
* @file #module_impl_name#.h
* Module Interface header for Module #module_impl_name#
* Generated automatically from specification; do not modify here
*/

void #module_impl_name#_#operation_name#_#updated
(#module_impl_name#_#context# context,
 const ECOA__return_status status,
 #module_impl_name#_#container#_#operation_name#_#handle# data_handle);

```

10.1.3 Event Received

The following is the C syntax for an event received by a module instance.

```

/*
* @file #module_impl_name#.h
* Module Interface header for Module #module_impl_name#
* Generated automatically from specification; do not modify here
*/

void #module_impl_name#_#operation_name#_#received
(#module_impl_name#_#context# context,
 const #event_parameters#);

```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an ‘as is’ basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

10.2 Module Lifecycle

10.2.1 Generic Module API

The following operations are applicable to supervision, non-supervision, trigger and dynamic-trigger module instances.

10.2.1.1 Initialize_Received

The C syntax for an operation to initialise a module instance is:

```
/*
 * @file #module_impl_name#.h
 * Module Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

void #module_impl_name#__INITIALIZE__received
    (#module_impl_name#__context* context);
```

10.2.1.2 Start_Received

The C syntax for an operation to start a module instance is:

```
/*
 * @file #module_impl_name#.h
 * Module Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

void #module_impl_name#__START__received
    (#module_impl_name#__context* context);
```

10.2.1.3 Stop_Received

The C syntax for an operation to stop a module instance is:

```
/*
 * @file #module_impl_name#.h
 * Module Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

void #module_impl_name#__STOP__received
    (#module_impl_name#__context* context);
```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

10.2.1.4 Shutdown_Received

The C syntax for an operation to shutdown a module instance is:

```
/*
 * @file #module_impl_name#.h
 * Module Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

void #module_impl_name#__SHUTDOWN__received
    (#module_impl_name#__context* context);
```

10.2.1.5 Reinitialize_Received

The C syntax for an operation to reinitialise a module instance is:

```
/*
 * @file #module_impl_name#.h
 * Module Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

void #module_impl_name#__REINITIALIZE__received
    (#module_impl_name#__context* context);
```

10.2.2 Supervision Module API

The C syntax for an operation that is used by the container to notify the supervision module that a module/trigger/dynamic trigger has changed state is:

```
/*
 * @file #supervision_module_impl_name#.h
 * Module Interface header for Supervision Module
 * #supervision_module_impl_name#
 * Generated automatically from specification; do not modify here
 */

void
#supervision_module_impl_name#__lifecycle_notification__#module_instance_name#
    (#supervision_module_impl_name#__context* context,
     ECOA__module_states_type previous_state,
     ECOA__module_states_type new_state);
```

The supervision module API will contain a Lifecycle Notification procedure for every module/trigger/dynamic trigger in the Component i.e. the above API will be duplicated for every #module_instance_name# module/trigger/dynamic trigger in the Component. ECOA.Module_States_Type is an enumerated type that contains all of the possible lifecycle states of the module instance.

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

10.3 Service Availability

10.3.1 Service Availability Changed

The following is the C syntax for an operation used by the container to invoke a service availability changed operation to a supervision module instance. The operation will only be available if the component has one or more required services. The reference_id type is an enumeration type defined in the Container Interface (Section 12.1.3).

```
/*
 * @file #supervision_module_impl_name#.h
 * Module Interface header for Supervision Module
 * #supervision_module_impl_name#
 * Generated automatically from specification; do not modify here
 */

#include "#supervision_module_impl_name#_container_types.h"

void #supervision_module_impl_name#__service_availability_changed
    (#supervision_module_impl_name #__context* context,
     #supervision_module_impl_name#_container__reference_id instance,
     ECOA__boolean8 available);
```

10.3.2 Service Provider Changed

The following is the C syntax for an operation used by the container to invoke a service provider changed operation to a supervision module instance. The operation will only be available if the component has one or more required services. The reference_id type is an enumeration type defined in the Container Interface (Section 12.1.3).

```
/*
 * @file #supervision_module_impl_name#.h
 * Module Interface header for Supervision Module
 * #supervision_module_impl_name#
 * Generated automatically from specification; do not modify here
 */

#include "#supervision_module_impl_name#_container_types.h"

void #supervision_module_impl_name#__service_provider_changed
    (#supervision_module_impl_name #__context* context,
     #supervision_module_impl_name#_container__reference_id instance);
```

10.4 Error_notification at application level

The C syntax for the container to report an error to a supervision module instance is:

```
/*
```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```

* @file #supervision_module_impl_name#.h
* Module Interface header for the Supervision Module
* #supervision_module_impl_name#
* Generated automatically from specification; do not modify here
*/

void #supervision_module_impl_name#__error_notification__#module_instance_name#
    (#supervision_module_impl_name#__context* context,
    ECOA__module_error_type module_error_type);

```

10.5 Error_notification at Fault Handler level

The C syntax for the container to report an error to a Fault Handler is:

```

/*
* @file #supervision_module_impl_name#.h
* Module Interface header for the Supervision Module
* #supervision_module_impl_name#
* Generated automatically from specification; do not modify here
*/

void #fault_handler_impl_name#__error_notification
    (#fault_handler_impl_name#__context* context,
    ECOA__error_id error_id,
    const ECOA__timestamp * timestamp,
    ECOA__asset_id asset_id,
    ECOA__asset_type asset_type,
    ECOA__error_type error_type);

```

11 Container Interface

11.1 Operations

11.1.1 Request Response

11.1.1.1 Response Send

The C syntax, applicable to both synchronous and asynchronous request response operations, for sending a reply is:

```

/*
* @file #module_impl_name#_container.h
* Container Interface header for Module #module_impl_name#
* Generated automatically from specification; do not modify here
*/

```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```

ECOA__return_status
#module_impl_name#_container__#operation_name#__response_send
(#module_impl_name#__context* context,
const ECOA__uint32 ID,
const #response_parameters#);

```

The “#response_parameters# in the above code snippet are passed as ‘const’ values, as they should not be modified by the container. The ID parameter is that which is passed in during the invocation of the request received operation.

11.1.1.2 Synchronous Request

The C syntax for a module instance to perform a synchronous request response operation is:

```

/*
 * @file #module_impl_name#_container.h
 * Container Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

ECOA__return_status
#module_impl_name#_container__#operation_name#__request_sync
(#module_impl_name#__context* context,
const #request_parameters#,
#response_parameters#);

```

11.1.1.3 Asynchronous Request

The C syntax for a module instance to perform an asynchronous request response operation is:

```

/*
 * @file #module_impl_name#_container.h
 * Container Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

ECOA__return_status
#module_impl_name#_container__#operation_name#__request_async
(#module_impl_name#__context* context,
ECOA__uint32* ID,
const #request_parameters#);

```

11.1.2 Versioned Data

This section contains the C syntax for versioned data operations, which allow a module instance to

- Get (request) Read Access
- Release Read Access

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an ‘as is’ basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

- Get (request) Write Access
 - Cancel Write Access (without writing new data)
 - Publish (write) new data (automatically releases write access)
- Note: the definition of versioned data handles involved in all #operation_name# is done in the Container Types header file, as specified in Section 12.1.1.

11.1.2.1 Get Read Access

```

/*
 * @file #module_impl_name#_container.h
 * Container Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

#include "#module_impl_name#_container_types.h"

ECOA__return_status
#module_impl_name#_container__#operation_name#_get_read_access
(#module_impl_name#_context* context,
 #module_impl_name#_container__#operation_name#_handle* data_handle);

```

11.1.2.2 Release Read Access

```

/*
 * @file #module_impl_name#_container.h
 * Container Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

#include "#module_impl_name#_container_types.h"

ECOA__return_status
#module_impl_name#_container__#operation_name#_release_read_access
(#module_impl_name#_context* context,
 #module_impl_name#_container__#operation_name#_handle* data_handle);

```

11.1.2.3 Get Write Access

```

/*
 * @file #module_impl_name#_container.h
 * Container Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```
#include "#module_impl_name#_container_types.h"

ECOIA__return_status
    #module_impl_name#_container__#operation_name#__get_write_access
    (#module_impl_name#__context* context,
     #module_impl_name#_container__#operation_name#_handle* data_handle);
```

11.1.2.4 Cancel Write Access

```
/*
 * @file #module_impl_name#_container.h
 * Container Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

#include "#module_impl_name#_container_types.h"

ECOIA__return_status
    #module_impl_name#_container__#operation_name#__cancel_write_access
    (#module_impl_name#__context* context,
     #module_impl_name#_container__#operation_name#_handle* data_handle);
```

11.1.2.5 Publish Write Access

```
/*
 * @file #module_impl_name#_container.h
 * Container Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

#include "#module_impl_name#_container_types.h"

ECOIA__return_status
    #module_impl_name#_container__#operation_name#__publish_write_access
    (#module_impl_name#__context* context,
     #module_impl_name#_container__#operation_name#_handle* data_handle);
```

11.1.3 Events

11.1.3.1 Send

The C syntax for a module instance to perform an event send operation is:

```
* @file #module_impl_name#_container.h
 * Container Interface header for Module #module_impl_name#
```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```

* Generated automatically from specification; do not modify here
*/

void #module_impl_name#_container__#operation_name#_send
    (#module_impl_name#__context* context,
     const #event_parameters# );

```

11.2 Properties

This section describes the syntax for the Get_Value operation to request the module properties whose values are fulfilled by the Infrastructure based on elements described in the component implementation XML file.

11.2.1 Get Value

The syntax for Get_Value is shown below, where

- #property_name# is the name of the property used in the component definition,
- #property_type_name# is the name of the data-type of the property.

```

/*
* @file #module_impl_name#_container.h
* Container Interface header for Module #module_impl_name#
* Generated automatically from specification; do not modify here
*/

void #module_impl_name#_container__get_#property_name#_value
    (#module_impl_name#__context* context,
     #property_type_name#* value);

```

11.2.2 Expressing Property Values

Not applicable to the C Binding.

11.2.3 Example of Defining and Using Properties

Not applicable to the C Binding.

11.3 Module Lifecycle

11.3.1 Non-Supervision Container API

Container operations are only available to supervision modules to allow them to manage the module lifecycle of non-supervision modules.

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

11.3.2 Supervision Container API

The C Syntax for the operations that are called by the supervision module to request the container to command a module/trigger/dynamic trigger instance to change (lifecycle) state is:

```
/*
 * @file #supervision_module_impl_name#_container.h
 * Container Interface header for Supervision Module
 * #supervision_module_impl_name#
 * Generated automatically from specification; do not modify here
 */

#include "#module_impl_name#_container_types.h"

void
#supervision_module_impl_name#_container__get_lifecycle_state__#module_instance_name#
    (#module_impl_name#__context* context,
     ECOA__module_states_type* current_state);

ECOA__return_status
#supervision_module_impl_name#_container__STOP__#module_instance_name#
    (#module_impl_name#__context* context);

ECOA__return_status
#supervision_module_impl_name#_container__START__#module_instance_name#
    (#module_impl_name#__context* context);

ECOA__return_status
#supervision_module_impl_name#_container__INITIALIZE__#module_instance_name#
    (#module_impl_name#__context* context);

ECOA__return_status
#supervision_module_impl_name#_container__SHUTDOWN__#module_instance_name#
    (#module_impl_name#__context* context);
```

An instance of each of the above operations is created for each module/trigger/dynamic trigger instance in the component, where #module_instance_name# above represents the name of the module/trigger/dynamic trigger instance.

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

11.4 Service Availability

11.4.1 Set Service Availability (Server Side)

The following is the C syntax for invoking the set service availability operation by a supervision module instance. The operation will only be available if the component has one or more provided services. The service instance is identified by the enumeration type `service_id` defined in the Container Types (Section 12.1.2).

```
/*
 * @file #supervision_module_impl_name#_container.h
 * Container Interface header for Supervision Module
 * #supervision_module_impl_name#
 * Generated automatically from specification; do not modify here
 */

#include "#supervision_module_impl_name#_container_types.h"

ECOA__return_status
#supervision_module_impl_name#_container__set_service_availability
(#supervision_module_impl_name#__context* context,
 #supervision_module_impl_name#_container__service_id instance,
 ECOA__boolean8 available);
```

11.4.2 Get Service Availability (Client Side)

The following is the C syntax for invoking the get service availability operation by a supervision module instance. The operation will only be available if the component has one or more required services. The service instance is identified by the enumeration type `reference_id` defined in the Container Types (Section 12.1.3).

```
/*
 * @file #supervision_module_impl_name#_container.h
 * Container Interface header for Supervision Module
 * #supervision_module_impl_name#
 * Generated automatically from specification; do not modify here
 */

#include "#supervision_module_impl_name#_container_types.h"

ECOA__return_status
#supervision_module_impl_name#_container__get_service_availability
(#supervision_module_impl_name#__context* context,
 #supervision_module_impl_name#_container__reference_id instance,
 ECOA__boolean8* available);
```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

11.5 Logging and Fault Management

This section describes the C syntax for the logging and fault management operations provided by the container. There are six operations:

- Trace: a detailed runtime trace to assist with debugging
- Debug: debug information
- Info: to log runtime events that are of interest e.g. changes of module state
- Warning: to report and log warnings
- Raise_Error: to report an error from which the application may be able to recover
- Raise_Fatal_Error: to raise a severe error from which the application cannot recover

11.5.1 Log_Trace

```
/* @file "#module_impl_name#_container.h"
 * Container Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

void #module_impl_name#_container__log_trace
    (#module_impl_name#__context* context,
     const ECOA__log log);
```

11.5.2 Log_Debug

```
/* @file "#module_impl_name#_container.h"
 * Container Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

void #module_impl_name#_container__log_debug
    (#module_impl_name#__context* context,
     const ECOA__log log);
```

11.5.3 Log_Info

```
/* @file "#module_impl_name#_container.h"
 * Container Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

void #module_impl_name#_container__log_info
    (#module_impl_name#__context* context,
     const ECOA__log log);
```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

11.5.4 Log_Warning

```
/* @file "#module_impl_name#_container.h"
 * Container Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

void #module_impl_name#_container__log_warning
    (#module_impl_name#__context* context,
     const ECOA__log log);
```

11.5.5 Raise_Error

```
/* @file "#module_impl_name#_container.h"
 * Container Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

void #module_impl_name#_container__raise_error
    (#module_impl_name#__context* context,
     const ECOA__log log);
```

11.5.6 Raise_Fatal_Error

```
/* @file "#module_impl_name#_container.h"
 * Container Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

void #module_impl_name#_container__raise_fatal_error
    (#module_impl_name#__context* context,
     const ECOA__log log);
```

11.6 Time Services

11.6.1 Get_Relative_Local_Time

```
/* @file "#module_impl_name#_container.h"
 * Container Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

void #module_impl_name#_container__get_relative_local_time
    (#module_impl_name#__context* context,
```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```
ECOA__hr_time *relative_local_time);
```

11.6.2 Get.UTC.Time

```
/* @file "#module_impl_name#_container.h"  
 * Container Interface header for Module #module_impl_name#  
 * Generated automatically from specification; do not modify here  
 */  
  
ECOA__return_status #module_impl_name#_container__get_utc_time  
    (#module_impl_name#__context* context,  
     ECOA__global_time *utc_time);
```

11.6.3 Get.Absolute.System.Time

```
/* @file "#module_impl_name#_container.h"  
 * Container Interface header for Module #module_impl_name#  
 * Generated automatically from specification; do not modify here  
 */  
  
ECOA__return_status #module_impl_name#_container__get_absolute_system_time  
    (#module_impl_name#__context* context,  
     ECOA__global_time *absolute_system_time);
```

11.6.4 Get.Relative.Local.Time.Resolution

```
/* @file "#module_impl_name#_container.h"  
 * Container Interface header for Module #module_impl_name#  
 * Generated automatically from specification; do not modify here  
 */  
  
void #module_impl_name#_container__get_relative_local_time_resolution  
    (#module_impl_name#__context* context,  
     ECOA__duration *relative_local_time_resolution);
```

11.6.5 Get.UTC.Time.Resolution

```
/* @file "#module_impl_name#_container.h"  
 * Container Interface header for Module #module_impl_name#  
 * Generated automatically from specification; do not modify here  
 */  
  
void #module_impl_name#_container__get_utc_time_resolution  
    (#module_impl_name#__context* context,
```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```
ECOA__duration *utc_time_resolution);
```

11.6.6 Get_Absolute_System_Time_Resolution

```
/* @file "#module_impl_name#_container.h"  
 * Container Interface header for Module #module_impl_name#  
 * Generated automatically from specification; do not modify here  
 */  
  
void #module_impl_name#_container__get_absolute_system_time_resolution  
 (#module_impl_name#__context* context,  
  ECOA__duration *absolute_system_time_resolution);
```

11.7 Persistent Information management (PINFO)

11.7.1 PINFO read

The C syntax for a module instance to read persistent data (PINFO) is:

```
/* @file "#module_impl_name#_container.h"  
 * Container Interface header for Module #module_impl_name#  
 * Generated automatically from specification; do not modify here  
 */  
  
ECOA__return_status #module_impl_name#_container__read_#PINFOname#  
 (#module_impl_name#__context* context,  
  ECOA__byte *memory_address,  
  ECOA__uint32 in_size,  
  ECOA__uint32 *out_size);
```

11.7.2 PINFO write

The C syntax for a module instance to write persistent data (PINFO) is:

```
/* @file "#module_impl_name#_container.h"  
 * Container Interface header for Module # module_impl_name#  
 * Generated automatically from specification; do not modify here  
 */  
  
ECOA__return_status #module_impl_name#_container__write_#PINFOname#  
 (#module_impl_name#__context* context,  
  ECOA__byte *memory_address,  
  ECOA__uint32 in_size);
```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

11.7.3 PINFO seek

The C syntax for a module instance to seek within persistent data (PINFO) is:

```
/* @file "#module_impl_name#_container.h"
 * Container Interface header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

ECOA__return_status #module_impl_name#_container__seek_#PINFOname#
    (#module_impl_name#__context* context,
     ECOA__int32 offset, ECOA__seek_whence_type whence,
     ECOA__uint32 *new_position);
```

11.7.4 Example of Defining Private PINFO

Not applicable to the C Binding.

11.7.5 Example of Defining Public PINFO

Not applicable to the C Binding.

11.8 Recovery Action

This section contains the C syntax for the recovery action service provided to Fault Handlers by the container.

```
/* @file "#fault_handler_impl_name#_container.h"
 * Container Interface header for Fault Handler Module
 * #fault_handler_impl_name#
 * Generated automatically from specification; do not modify here
 */

ECOA__return_status #fault_handler_impl_name#_container__recovery_action
    (#fault_handler_impl_name#__context* context,
     ECOA__recovery_action_type recovery_action,
     ECOA__asset_id asset_id,
     ECOA__asset_type asset_type);
```

11.9 Save Warm Start Context

The C syntax for a module instance to save its warm start (non-volatile) context is:

```
/* @file "#module_impl_name#_container.h"
 * Container Interface header for Module
 * #module_impl_name#
 * Generated automatically from specification; do not modify here
```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```

*/

#include "#module_impl_name#_container_types.h"

void #module_impl_name#_container__save_warm_start_context
    (#module_impl_name#__context* context);

```

12 Container Types

This section contains details of the data types that comprise the container API i.e. the data types that can be used by a module.

12.1.1 Versioned Data Handles

This section contains the C syntax in order to define data handles for versioned data operations defined in the Container Interface.

```

/*
 * @file #module_impl_name#_container_types.h
 * Container Types header for Module #module_impl_name#
 * Generated automatically from specification; do not modify here
 */

#define ECOA_VERSIONED_DATA_HANDLE_PRIVATE_SIZE 32

/*
 * The following is the data handle structure associated to the data operation
 * called #operation_name# of data-type #type_name#
 */
typedef struct {
    /* pointer to the local copy of the data */
    #type_name#* data;
    /* date of the last update of that version of the data */
    ECOA__timestamp timestamp;
    /* technical info associated with the data (opaque for the user, reserved */
    /* for the infrastructure) */
    ECOA__byte platform_hook[ECOA_VERSIONED_DATA_HANDLE_PRIVATE_SIZE];
} #module_impl_name#_container__#operation_name#_handle;

```

12.1.2 Service ID Enumeration

In C `service_id` translates to `#supervision_module_impl_name#_container__service_id`.

This enumeration has a value for each element `<service/>` defined in the file `.componentType`, whose name is given by its attribute `name` and the numeric value is the position (starting at 0).

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

The service_id enumeration is only available if the component provides one or more services.

```
typedef ECOA__uint32 #supervision_module_impl_name#_container__service_id;
#define
    #supervision_module_impl_name#_container__service_id__#service_instance_name#
        (0)
```

12.1.3 Reference ID Enumeration

In C reference_id translates to

```
#supervision_module_impl_name#_container__reference_id.
```

This enumeration has a value for each element *<reference/>* defined in the file .componentType, whose name is given by its attribute *name* and the numeric value is the position (starting at 0).

The reference_id enumeration is only available if the component requires one or more services.

```
typedef ECOA__uint32 #supervision_module_impl_name#_container__reference_id;
#define
#supervision_module_impl_name#_container__reference_id__#reference_instance_name#
    (0)
```

13 External Interface

This section contains the C syntax for the ECOA external interface provided to non-ECOA software by the container.

Note: the choice of the language for generating external APIs is made separately from the choice of the language for generating ECOA modules APIs. The choice of supported languages is made depending on needs that are to be taken into account in platform procurement requirements.

```
/* @file "#component_impl_name#_External_Interface.h"
 * External Interface header for Component Implementation
 * #component_impl_name#
 * Generated automatically from specification; do not modify here
 */
void #component_impl_name#__#external_operation_name#
    (const #event_parameters#);
```

14 Reference C Header

```
/*
 * @file ECOA.h
 */

/* This is a compilable ISO C99 specification of the generic ECOA types, */
/* derived from the C binding specification. */
```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```

/* The declarations of the types given below are taken from the      */
/* standard, as are the enum types and the names of the others types. */
/* Unless specified as implementation dependent, the values specified in */
/* this appendix should be implemented as defined.                    */

#ifndef __ECO_A_H__
#define __ECO_A_H__

#if defined(__cplusplus)
extern "C" {
#endif /* __cplusplus */

/* ECOA:boolean8 */
typedef unsigned char ECOA__boolean8;
#define ECOA__TRUE (1)
#define ECOA__FALSE (0)

/* ECOA:int8 */
typedef char ECOA__int8;
#define ECOA__INT8_MIN (-127)
#define ECOA__INT8_MAX ( 127)

/* ECOA:char8 */
typedef char ECOA__char8;
#define ECOA__CHAR8_MIN (0)
#define ECOA__CHAR8_MAX (127)

/* ECOA:byte */
typedef unsigned char ECOA__byte;
#define ECOA__BYTE_MIN (0)
#define ECOA__BYTE_MAX (255)

/* ECOA:int16 */
typedef short int ECOA__int16;
#define ECOA__INT16_MIN (-32767)
#define ECOA__INT16_MAX ( 32767)

/* ECOA:int32 */
typedef int ECOA__int32;
#define ECOA__INT32_MIN (-2147483647L)
#define ECOA__INT32_MAX ( 2147483647L)

```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```

/* ECOA:uint8 */
typedef unsigned char ECOA__uint8;
#define ECOA__UINT8_MIN (0)
#define ECOA__UINT8_MAX (255)

/* ECOA:uint16 */
typedef unsigned short int ECOA__uint16;
#define ECOA__UINT16_MIN (0)
#define ECOA__UINT16_MAX (65535)

/* ECOA:uint32 */
typedef unsigned int ECOA__uint32;
#define ECOA__UINT32_MIN (0LU)
#define ECOA__UINT32_MAX (4294967295LU)

/* ECOA:float32 */
typedef float ECOA__float32;
#define ECOA__FLOAT32_MIN (-3.402823466e+38F)
#define ECOA__FLOAT32_MAX ( 3.402823466e+38F)

/* ECOA:double64 */
typedef double ECOA__double64;
#define ECOA__DOUBLE64_MIN (-1.7976931348623157e+308)
#define ECOA__DOUBLE64_MAX ( 1.7976931348623157e+308)

#if defined(ECOA_64BIT_SUPPORT)

/* ECOA:int64 */
typedef long long int ECOA__int64;
#define ECOA__INT64_MIN (-9223372036854775807LL)
#define ECOA__INT64_MAX ( 9223372036854775807LL)

/* ECOA:uint64 */
typedef unsigned long long int ECOA__uint64;
#define ECOA__UINT64_MIN (0LLU)
#define ECOA__UINT64_MAX (18446744073709551615LLU)

#endif /* ECOA_64BIT_SUPPORT */

/* ECOA:return_status */
typedef ECOA__uint32 ECOA__return_status;
#define ECOA__return_status_OK (0)
#define ECOA__return_status_INVALID_HANDLE (1)

```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```

#define ECOA__return_status_DATA_NOT_INITIALIZED (2)
#define ECOA__return_status_NO_DATA (3)
#define ECOA__return_status_INVALID_IDENTIFIER (4)
#define ECOA__return_status_NO_RESPONSE (5)
#define ECOA__return_status_OPERATION_ALREADY_PENDING (6)
#define ECOA__return_status_INVALID_SERVICE_ID (7)
#define ECOA__return_status_CLOCK_UNSYNCHRONIZED (8)
#define ECOA__return_status_INVALID_TRANSITION (9)
#define ECOA__return_status_RESOURCE_NOT_AVAILABLE (10)
#define ECOA__return_status_OPERATION_NOT_AVAILABLE (11)
#define ECOA__return_status_PENDING_STATE_TRANSITION (12)
#define ECOA__return_status_INVALID_PARAMETER (13)

/* ECOA:hr_time */
typedef struct {
    ECOA__uint32 seconds; /* Seconds */
    ECOA__uint32 nanoseconds; /* Nanoseconds*/
} ECOA__hr_time;

/* ECOA:global_time */
typedef struct {
    ECOA__uint32 seconds; /* Seconds */
    ECOA__uint32 nanoseconds; /* Nanoseconds*/
} ECOA__global_time;

/* ECOA:duration */
typedef struct {
    ECOA__uint32 seconds; /* Seconds */
    ECOA__uint32 nanoseconds; /* Nanoseconds*/
} ECOA__duration;

/* ECOA:timestamp */
typedef struct {
    ECOA__uint32 seconds; /* Seconds */
    ECOA__uint32 nanoseconds; /* Nanoseconds*/
} ECOA__timestamp;

/* ECOA:log */
#define ECOA__LOG_MAXSIZE (256)
typedef struct {
    ECOA__uint32 current_size;
    ECOA__char8 data[ECOA__LOG_MAXSIZE];
} ECOA__log;

```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```

/* ECOA:module_states_type */
typedef ECOA__uint32 ECOA__module_states_type;
#define ECOA__module_states_type_IDLE      (0)
#define ECOA__module_states_type_READY    (1)
#define ECOA__module_states_type_RUNNING  (2)

/* ECOA:module_error_type */
typedef ECOA__uint32 ECOA__module_error_type;
#define ECOA__module_error_type_ERROR      (0)
#define ECOA__module_error_type_FATAL_ERROR (1)

/* ECOA:error_id */
typedef ECOA__uint32 ECOA__error_id;

/* ECOA:asset_id */
typedef ECOA__uint32 ECOA__asset_id;

/* ECOA:asset_type */
typedef ECOA__uint32 ECOA__asset_type;
#define ECOA__asset_type_COMPONENT          (0)
#define ECOA__asset_type_PROTECTION_DOMAIN (1)
#define ECOA__asset_type_NODE              (2)
#define ECOA__asset_type_PLATFORM          (3)
#define ECOA__asset_type_SERVICE           (4)
#define ECOA__asset_type_DEPLOYMENT        (5)

/* ECOA:error_type */
typedef ECOA__uint32 ECOA__error_type;
#define ECOA__error_type_RESOURCE_NOT_AVAILABLE (0)
#define ECOA__error_type_UNAVAILABLE           (1)
#define ECOA__error_type_MEMORY_VIOLATION     (2)
#define ECOA__error_type_NUMERICAL_ERROR      (3)
#define ECOA__error_type_ILLEGAL_INSTRUCTION (4)
#define ECOA__error_type_STACK_OVERFLOW       (5)
#define ECOA__error_type_DEADLINE_VIOLATION   (6)
#define ECOA__error_type_OVERFLOW            (7)
#define ECOA__error_type_UNDERFLOW           (8)
#define ECOA__error_type_ILLEGAL_INPUT_ARGS   (9)
#define ECOA__error_type_ILLEGAL_OUTPUT_ARGS  (10)
#define ECOA__error_type_ERROR                (11)
#define ECOA__error_type_FATAL_ERROR          (12)
#define ECOA__error_type_HARDWARE_FAULT       (13)
#define ECOA__error_type_POWER_FAIL           (14)
#define ECOA__error_type_COMMUNICATION_ERROR  (15)

```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.

```

#define ECOA__error_type_INVALID_CONFIG          (16)
#define ECOA__error_type_INITIALISATION_PROBLEM (17)
#define ECOA__error_type_CLOCK_UNSYNCHRONIZED  (18)
#define ECOA__error_type_UNKNOWN_OPERATION      (19)
#define ECOA__error_type_OPERATION_OVERRATED    (20)
#define ECOA__error_type_OPERATION_UNDERRATED   (21)

/* ECOA:recovery_action_type */
typedef ECOA__uint32 ECOA__recovery_action_type;
#define ECOA__recovery_action_type_SHUTDOWN      (0)
#define ECOA__recovery_action_type_COLD_RESTART  (1)
#define ECOA__recovery_action_type_WARM_RESTART  (2)
#define ECOA__recovery_action_type_CHANGE_DEPLOYMENT (3)

#define ECOA__PINFO_FILENAME_MAXSIZE 256

typedef struct {
    ECOA__uint32 current_size;
    ECOA__char8 data[ECOA__PINFO_FILENAME_MAXSIZE];
} ECOA__pinfo_filename;

/* ECOA:seek_whence_type */
typedef ECOA__uint32 ECOA__seek_whence_type;
#define ECOA__seek_whence_type_SEEK_SET (0)
#define ECOA__seek_whence_type_SEEK_CUR (1)
#define ECOA__seek_whence_type_SEEK_END (2)

#if defined(__cplusplus)
}
#endif /* __cplusplus */

#endif /* __ECO_A_H__ */

```

This specification is developed by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd and the copyright is owned by BAE Systems (Operations) Limited, Dassault Aviation, Bull SAS, Thales Systèmes Aéroportés, AgustaWestland Limited, GE Aviation Systems Limited, General Dynamics United Kingdom Limited and Selex ES Ltd. The information set out in this document is provided solely on an 'as is' basis and co-developers of this specification make no warranties expressed or implied, including no warranties as to completeness, accuracy or fitness for purpose, with respect to any of the information.